

CHANGE THE COLOR LCD MONITOR INDICATION.

-

The Grid Display mode for still picture taking is added to the LCD monitor.

Display Icons → **Grid Display** → Hide Icons → LCD Monitor OFF → ...

■ The grid display cannot be used in MF mode and movie mode.

Addition of ISO 50 sensitivity

Notice :

- ISO 50 has a narrow dynamic range and therefore may blow out highlight detail such as brightness or high saturation areas. Please ensure pictures are taken with the correct exposure setting. If it will not be possible to capture sufficient results, please adjust the EV setting to the minus side for a little more protection of the highlights.
- If [Auto] is selected, it will not change to ISO 50 automatically. Regardless of the firmware version, the ISO value will change to ISO 100 or 200 in normal shooting, or to ISO 100, 200 or 400 automatically when using flash.

Customizing the Digital Zoom Button function




It is possible to allocate different functions such as **[ISO Setting]** from **[Shooting Menu]** to the **(W)** **(T)** buttons (the Digital Zoom Button).

- 16 functions which all function with the exception of **[Color space]** in the **[📷 Shooting Menu]** (**P.28-29** of the instruction manual), **Qs** (Quick Set Menu) and **OFF** can be allocated to the **[W]** **[T]** buttons.
- If you wish to use the digital zoom, please select **[Digital Zoom]** from the **[Zoom Button Settings]** menu.

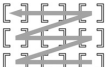

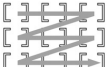
How to set:

1. Press the **MENU** button.
2. To open the **[Set Up]** menu, press the **►** button.
3. Use the **◄** buttons to select the **[Zoom Button Settings]** menu and press the **►** button.
4. Use the **◄** buttons to select the desired setting and press the **►** button.

Set Both Buttons	It is possible to allocate the same function to both W T buttons. The setting will change by pressing W T buttons.
Wide Button Setting	It is possible to allocate different functions to the T button and W button. The setting will change by pressing the allocated button.
Tele Button Setting	

5. Use the  buttons to select the desired icon and then press the  button to apply the setting.
- The available settings are limited depending on the selected shooting mode. (Unavailable icons will be turned grey.)
 - According to the selected function, the setting will be changed as follows by pressing the  buttons.



	Set Both Buttons	Wide Button Setting Tele Button Setting
ISO Setting, Image Size, Image Quality, White Balance Color Settings, Drive Mode Metering Mode	The selected icon can be changed. (Example) Image Quality	
	FINE ↔ NORM ↔ BASIC ↔ RAW	FINE → NORM → BASIC → RAW
Auto Bracket, Contrast, Sharpness, Saturation	The value will be displayed next to the selected icon, and can be changed. The value will disappear 2 seconds after being set. Only the icon will be displayed. (If the setting values is 0, the icon will be hide as well)	
Image With Sound	OFF (Hide icon) ↔ ON (🔊)	
Digital Zoom	Press [T] to increase magnification or [W] to decrease magnification.	Press the button to increase magnification. When the button is pressed passed the maximum ratio, the magnification will return to the original ratio.
AF Area	AF area will change as follows.	
	[W]  [T] 	

- When Custom White Balance is selected, the previous stored setting will be used. To capture a new custom white balance, please refer to **P.52** for information regarding “**Setting a Custom White Balance**”.

How to use the Qs (Quick Set Menu)

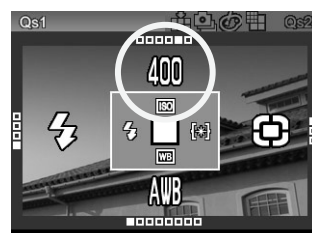
When the camera is in the Still Image Mode, the Quick Set Menu will be displayed by pressing the **(W/T)** button. (By pressing the **(W/T)** button again, it is possible to switch to **Qs1** or **Qs2**.)

Select the desired Menu by pressing the 4-way controller and change the setting.




Qs1 (Quick Set Menu 1)	Qs2 (Quick Set Menu 2)
<ul style="list-style-type: none"> ▲ ISO Setting ▼ White Balance ◀ Flash Mode ▶ Metering Mode 	<ul style="list-style-type: none"> ▲ Image Size ▼ Color Settings ◀ Image Quality ▶ Drive Mode

For example, if you wish to change the ISO Setting to 400, press the **(W/T)** button to display Qs1, then set the value to 400 by pressing the **▲** button several times.

By pressing **MENU** **OK** or the shutter button “half-way”, the settings will be applied and the camera will return to shooting mode.



Warning !!

- Select , if you wish to set to the Drive Mode to **[Single]**.
- Select **NORM**, if you wish to set the Color Settings to **[Normal]**.
- When the recoding mode is set to the movie mode, only White balance can be changed.
- When Image Quality is selected to **RAW**, Image Size will be set to  (**Hi**) automatically. It is not possible to select any other Image Size.
- When Custom White Balance  is selected, the previous stored setting will be used. To capture a new custom white balance, please refer to **P.52** for information regarding “**Setting a Custom White Balance**”.