

**EO-ETTL II CANON ELECTRONIC FLASH EF-530 DG ST**

Operation of TTL Auto system varies depending on each camera model (Automatic Exposure can be used on E-TTL II, E-TTL and TTL, while not on A-TTL). Manual Flash, Autozoom Head, and AF Auxiliary Lamp can be used on most camera models but not all. The amount of light can be switched manually from 1/1 to 1/16. Auto Power-Off function shuts off 90 seconds after use.

	TTL Auto	Autozoom Head	Manual Flash	AF Auxiliary Lamp
EOS-1	TTL	✓	✓	✓
EOS-1N	TTL	✓	✓	✓
EOS-1V	E-TTL	✓	✓	✓
EOS10 QD, EOS10S, EOS10	TTL	✓	✓	×
EOS 3	E-TTL	✓	✓	✓
EOS 5 QD, EOS A2, EOS A2E, EOS 5	TTL	✓	✓	×
EOS 55, EOS ELAN II E, EOS 50E	E-TTL	✓	✓	✓
EOS 7, EOS ELAN 7E/Date/7, EOS 30/Date/33/Date	E-TTL	✓	✓	✓
EOS 7s, EOS ELAN7NE, EOS ELAN7N, EOS30V/ EOS33V	E-TTL II	✓	✓	✓
EOS 100QD, EOS ELAN, EOS 100, EOS 100 P	TTL	✓	✓	✓
EOS 620	TTL	✓	✓	✓
EOS 630	TTL	✓	✓	✓
EOS 650 QD	TTL	✓	✓	✓
EOS 700 QD, EOS 700	TTL	✓	×	✓
EOS 750 QD	TTL	✓	×	✓
EOS 850	TTL	✓	×	✓
EOS 1000 QD, EOS 1000 QD P, EOS REBEL, EOS REBEL S, EOS 1000F, EOS 1000F QD, EOS 1000	TTL	✓	✓	✓
EOS 1000S QD, EOS REBEL S II QD, EOS REBEL S, EOS REBEL II QD, EOS REBEL II, EOS 1000FN QD, EOS 1000FN, EOS 1000N	TTL	✓	✓	✓
EOS 3000, EOS 88	TTL	✓	✓	✓
EOS Ix 50, EOS Ix Lite, EOS Ix 7	E-TTL	✓	✓	✓
EOS IX E/EOS IX	E-TTL	✓	✓	✓
EOS Kiss, EOS REBEL XS, EOS 500	TTL	✓	✓	×
EOS KISS 5, EOS Rebel Ti, EOS 300V	E-TTL	✓	✓	✓
EOS Kiss 7, EOS REBEL T2, EOS 300X	E-TTL II	✓	✓	✓
EOS Kiss III, EOS REBEL 2000/ QD EOS 300/QD	E-TTL	✓	✓	✓
EOS Kiss III L	E-TTL	✓	✓	✓
EOS Kiss Lite, EOS REBEL K2, EOS 3000V	E-TTL	✓	✓	✓
EOS New Kiss, EOS REBEL G/EOS 500N	E-TTL	✓	✓	✓
EOS REBEL X	TTL	✓	✓	×
EOS Rebel XS N Date, EOS 3000N/DATE, EOS 66/Date	TTL	✓	✓	×
EOS RT	TTL	✓	✓	✓
EOS-1D	E-TTL	✓	✓	✓
EOS-1D Mark II	E-TTL II	✓	✓	✓
EOS-1D Mark II N	E-TTL II	✓	✓	✓
EOS-1D Mark III	E-TTL II	✓	✓	✓
EOS-1Ds	E-TTL	✓	✓	✓
EOS-1Ds Mark II	E-TTL II	✓	✓	✓
EOS-1Ds Mark III	E-TTL II	✓	✓	✓
EOS 5D	E-TTL II	✓	✓	✓
EOS 7D	E-TTL II	✓	✓	✓

# SIGMA

## EO-ETTL II CANON ELECTRONIC FLASH EF-530 DG ST

Operation of TTL Auto system varies depending on each camera model (Automatic Exposure can be used on E-TTL II, E-TTL and TTL, while not on A-TTL). Manual Flash, Autozoom Head, and AF Auxiliary Lamp can be used on most camera models but not all. The amount of light can be switched manually from 1/1 to 1/16. Auto Power-Off function shuts off 90 seconds after use.

	TTL Auto	Autozoom Head	Manual Flash	AF Auxiliary Lamp
EOS 5D Mark II	E-TTL II	✓	✓	✓
EOS 10D	E-TTL	✓	✓	✓
EOS 20D	E-TTL II	✓	✓	✓
EOS 30D	E-TTL II	✓	✓	✓
EOS 40D	E-TTL II	✓	✓	✓
EOS 50D	E-TTL II	✓	✓	✓
EOS D30	E-TTL	✓	✓	✓
EOS D60	E-TTL	✓	✓	✓
EOS Kiss Digital, EOS Digital REBEL, EOS 300D Digital	E-TTL II	✓	✓	✓
EOS Kiss Digital N, EOS Digital REBEL XT, EOS 350D Digital	E-TTL II	✓	✓	✓
EOS Kiss Digital X, EOS Digital REBEL XTi, EOS 400D Digital	E-TTL II	✓	✓	✓
EOS Kiss X2, EOS REBEL XSi, EOS 450D	E-TTL II	✓	✓	✓
EOS Kiss X3, EOS REBEL T1i, EOS 500D	E-TTL II	✓	✓	✓
EOS Kiss F, EOS REBEL XS, EOS 1000D	E-TTL II	✓	✓	✓